

Guidance for wireless outdoor siren

Introduction

A very loud powerful strobe siren can not only alert people, but also scare/deter the intruders from entering the property or leaving the house without proceeding illegal actions. Wireless strobe siren contains backup battery, working with AC110 - 240V, comes with different types of plugs. This strobe siren has wireless receiver which allow it to connect with wireless alarm system through radio frequency (RF).



Model: VS-XWSJGH-A

① Remove this small opener, you will find the fixed screw. Unscrew it, you can open the siren



Model: VS-XWSJGH

① Remove this screw, user can open the siren


Programming

Step1: Plug the wireless siren into power socket, and press the "Power" button to power on the wireless siren. You will hear short noise sounds.


Step2: Use your hand press the "enroll/study button" for one time, the strobe light will turn ON. Now the siren is in enroll status. Make sure there is no other wireless signal emitting (such as triggering PIR motion sensor, or press button on remote controls).

Step3: Trigger the panic alarm by press "panic button/SOS" on the alarm panel.

Step4: After trigger the alarm, the siren's strobe light will flash four times again, that means the programming is successful.

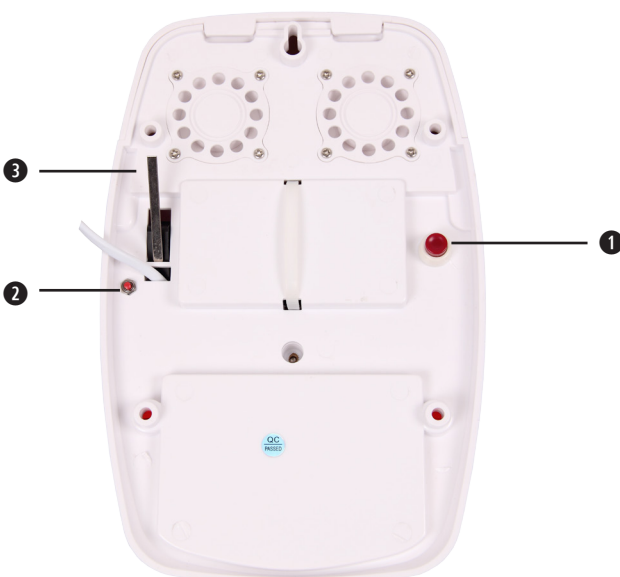

- ① Power ON/OFF
- ② Enroll/Study Button
- ③ Tamper Switch

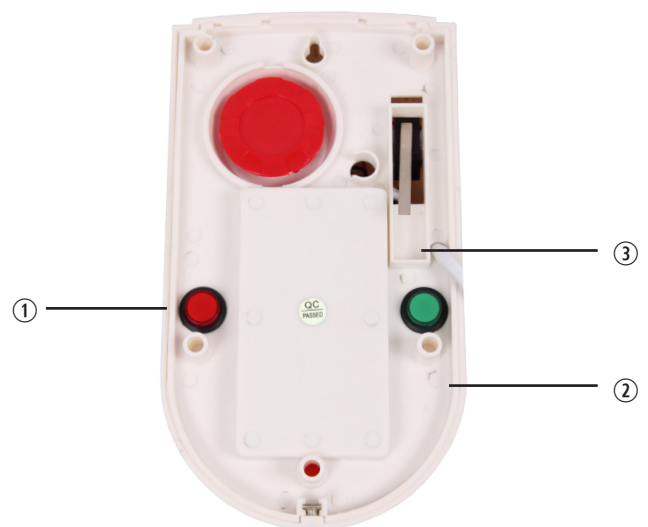

- ① Enroll/Study Button
- ② Power ON/OFF
- ③ Tamper Switch